


Faria[®] MARINE
INSTRUMENTS


Dual Temperature Depth Sounder

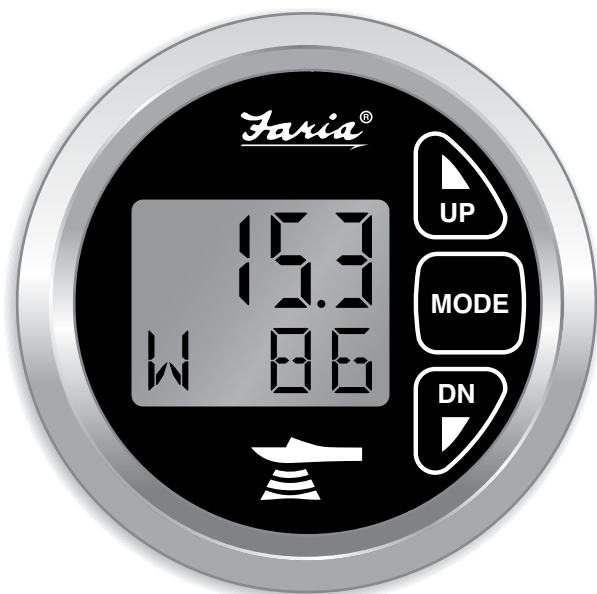

- Digital Depth Sounder displays depth in feet and meters
- Shallow and Deep Water alarms
- Alarms are Audio and Visual
- Programmable Keel Offset

Owner's Manual

IS0197 rev D ecr 8739 04/2012

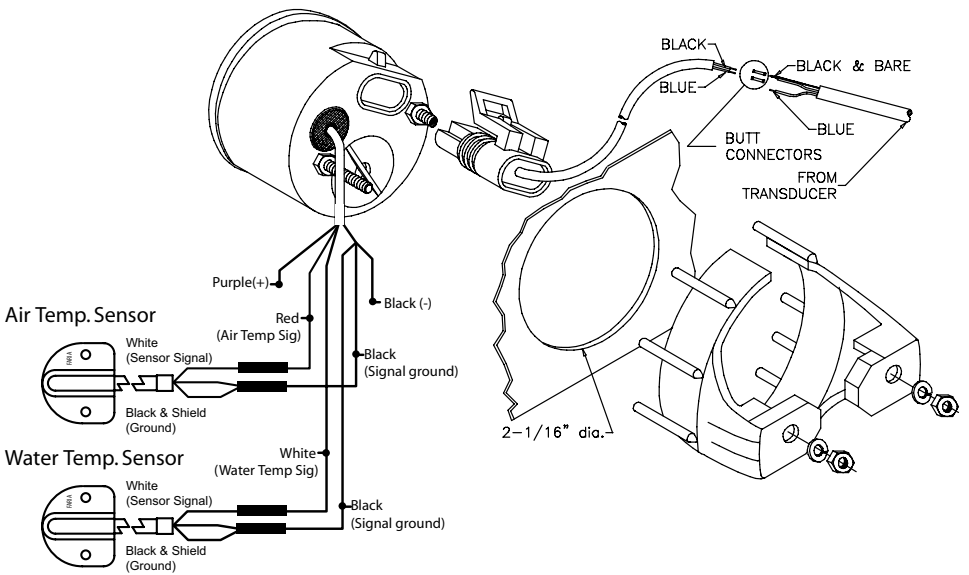

WARNING: The depth sounder is not to be used for navigation or as a device to avoid grounding which may result in boat damage or personal injury. Always use caution operating in shallow areas and maintain a very slow speed. Be aware that depths may change too quickly for you to react and avoid grounding.

CAUTION: Disconnect the battery during installation. Tighten nuts on the back-clamp only slightly more than you can tighten with your fingers. **Six inch-pounds** of torque are sufficient. Over-tightening could result in damage to the instrument and may void your warranty.

1. It is recommended that insulated wire terminals, preferably ring type, be used on all connections to the power source.
2. Cut a 2-1/16" diameter hole in the dash and mount the gauge with the back clamp supplied.
3. Connect any one of the black wires to the boat's electrical ground, usually available at several locations near the instrument panel.

4. Connect the purple wire to a 12 Volt DC circuit that is activated by the ignition switch.
5. Connect a second black wire to the water temperature sensor ground.
6. Connect the white wire to the water temperature white sensor signal wire.
7. Connect a third black wire to the air temperature sensor ground
8. Connect the red wire to the air temperature white sensor signal wire.

9. Once the transducer is installed and you have lead the cable to the depth sounder, connect the three wires (black, blue, and bare) from the transducer to the corresponding colored wires of the connector plug using the butt connectors supplied. (See Illustration)

NOTE:

- 1.) The bare and black wire from the transducer will need to be twisted together and then both connected to the black wire of the plug.

The butt connectors have a heat activated

waterproofing. When the butt connections have been crimped, slowly apply heat with a heat gun until you see sealant coming out of the connector ends. It is recommended to wrap the connections together with electrical tape for further protection. Plug the connector into the rear of the depth sounder.

2.) If the transducer cable is not connected properly or not plugged into the depth sounder, or the boat in the water, the display will blink when the power is applied to the unit.

3.) Mount the Water temperature sensor as low as possible on the transom.

4.) Mount the Air temperature sensor anywhere in the boat other than the engine compartment. For best results place sensor away from direct sun light.

General description:

1. The depth sounder will display depth of 3 feet to 199 feet. If the reading is less than 19.9 feet, 1/10th increments will be displayed. If the reading is more than 19.9 feet, all readings will be in whole numbers.

2. The depth sounder has an audible and LCD displayed depth alarm with adjustable shallow and deep limits and a depth below keel offset feature. These settings once made are stored in memory and will remain even if the battery is disconnected.

Operation:

1. **Power on.** The depth sounder will activate automatically when the power to it is initially turned on. You do not have to press any key. The LCD will illuminate showing the depth in the upper display. The lower display will show a "W" and water temperature. Press the "Up" button and the lower display will change to an "A" and the air temperature will be displayed. Press the "Down" button to return to the water temperature display. To turn the depth sounder off, press and hold the "MODE" keypad for 4 seconds. Pressing the "MODE" keypad again will reactivate

the unit.

NOTE: The instrument is designed to have the internal LED lighting remain on as long as power is supplied even if the unit is turned "off" at the keypad.

2. Depth alarm.

Deep mode: Pressing the "MODE" keypad again displays the "DEEP" deep depth alarm setting. This is the deepest water that will activate the alarm. Press and hold the "Up" or the "Down" arrow keypad to adjust the reading to the desired depth.

Shallow mode: Press the "MODE" keypad to display the "SHAL" shallow depth alarm setting. This is the shallowest water that will activate the alarm. Press and hold the "Up" or the "Down" arrow keypad to adjust the reading to the desired depth.

When the depth of the water is less than the shallow depth alarm setting the audible alarm will sound rapidly. When the depth of the water is deeper than the deep depth alarm setting the audible alarm will sound at 2 beeps per second.

NOTE: To fully deactivate an alarm, reset it to zero. Pressing the "MODE" keypad temporarily deactivates the alarm. To reactivate the alarm press the "MODE" keypad until the depth reading appears.

3. **Keel offset.** Pressing the "MODE" keypad again displays the "KEEL" keel offset setting. This can be set so that the depth sounder either shows the depth below the keel or the depth below the transducer. Press the up or down arrow keypads to adjust the reading to the desired depth no more than 19.9 ft. For example if the bottom of the keel is 2.5 feet below the transducer and you want the depth sounder to read the depth below the keel, the display should be adjusted to read 2.5 FT.

NOTE: Once a keel offset is programmed, the shallow and deep alarms will be activated by the depth below the keel.

Units - Change the unit of measure. The lower display will show "UNIT" and the upper display will show either "US" or "EURO" for metric units. Pressing the up or down buttons will cycle through the choices.

Pressing the mode button will save the units shown in the display and change the display

Back to the normal depth mode. There will be no units shown in the displays. It will be up to the operator to determine the units from the temperature reading.

Display Sequence

