



Beede Electrical Instrument Company, Inc.  
 88 Village Street, Penacook, NH 03303-8910  
 Phone: (603) 753-6362 FAX: (603) 753-6201

Since 1917 Visit our WEB site <http://www.beede.com> ISO 9001 CERTIFIED

- AGRICULTURAL
- AUTOMOTIVE
- INDUSTRIAL
- MARINE
- TRUCK
- BUS

### WARRANTY

Beede Electrical Instrument Co., Inc. warrants all instruments and accessories free from all defects in workmanship and materials on gauges that are less than three (3) years old or have been in service fewer than two (2) years and, at no charge, will replace or repair at Beede's option all instruments that fail. Contact Beede for complete details.

# 5" 3-in-1 Water Speed Indicator Installation Instructions

## ⚠ WARNING

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory.

Disconnect battery cables before installing the instrument.

Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

## MOUNTING

Recommended dash hole size: 4.65±.02 in (118.10±0.05 mm) DIA.

Secure the instrument into dashboard with mounting "U" clamp, lock washers and hex nuts.

Position instrument in dashboard prior to tightening clamp nuts to recommended torque.

If dashboard thickness exceeds clamp grip range, clamp legs may be shortened.

Maximum recommended tightening torque for all hardware: 8 lb-in (0.90 N-m).

Caution, over tightening mounting hardware may damage the instrument.

## MAINTENANCE

Periodically check and torque all hardware per mounting specifications.

Clean electrical connections if corrosion develops around hardware.

Clean glass with a soft, damp, clean cloth.

## THANK YOU!

Thank you for purchasing a Beede instrument. Our instruments are made for you in the U.S.A. Visit our WEB site at [www.beede.com](http://www.beede.com) or contact customer service for information on this or other Beede instruments.

### MOUNTING "U" CLAMP

LOCK WASHER

HEX NUT

Slide tubing completely over barb fitting and secure with TAL-strap.


DO NOT use any adhesive or lubricant when installing tube onto the barb fitting.

BARB FITTING


For electrical connections, use hex nuts and lock washers supplied with the mounting kit.

TO STARTER SOLENOID

VOLTAGE REGULATOR

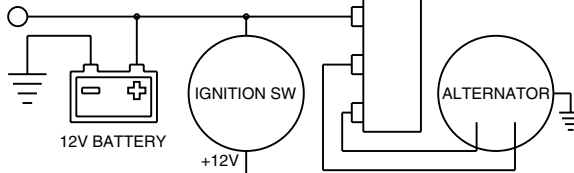

WIRING CONNECTION AND PART NUMBER LABEL

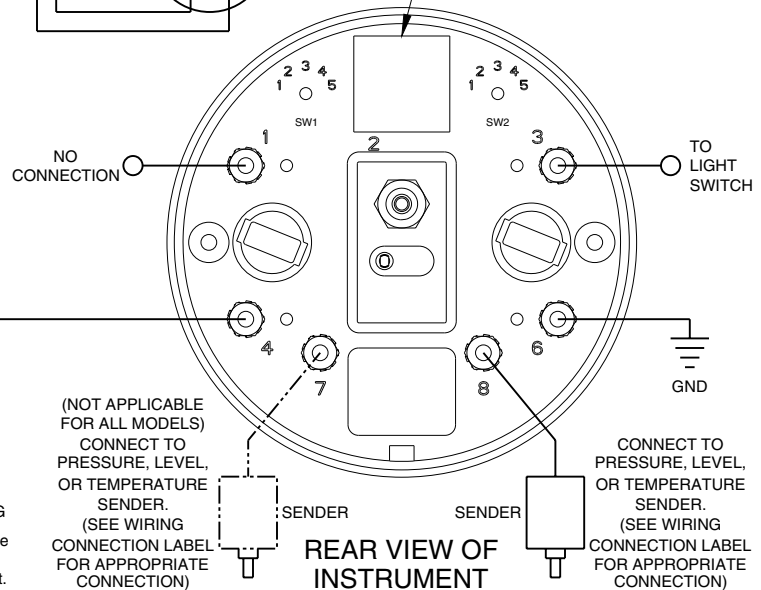

(NOT APPLICABLE FOR ALL MODELS) CONNECT TO PRESSURE, LEVEL, OR TEMPERATURE SENDER. (SEE WIRING CONNECTION LABEL FOR APPROPRIATE CONNECTION)

## REAR VIEW OF INSTRUMENT

CONNECT TO PRESSURE, LEVEL, OR TEMPERATURE SENDER. (SEE WIRING CONNECTION LABEL FOR APPROPRIATE CONNECTION)