



Beede Electrical Instrument Company, Inc.
 88 Village Street, Penacook, NH 03303-8910
 Phone: (603) 753-6362 FAX: (603) 753-6201

Since 1917 Visit our WEB site <http://www.beede.com> ISO 9001 CERTIFIED

- AGRICULTURAL
- AUTOMOTIVE
- INDUSTRIAL
- MARINE
- TRUCK
- BUS

WARRANTY

Beede Electrical Instrument Co., Inc. warrants all instruments and accessories free from all defects in workmanship and materials on gauges that are less than three (3) years old or have been in service fewer than two (2) years and, at no charge, will replace or repair at Beede's option all instruments that fail. Contact Beede for complete details.

5" Series 2000 Speedometer Installation Instructions

⚠ WARNING

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory.

Disconnect battery cables before installing the instrument.

Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

MOUNTING

Recommended dash hole size: 4.65--.02 in (118.10--0.05 mm) DIA.

Secure the instrument into dashboard with mounting "U" clamp, lock washers and hex nuts.

Position instrument in dashboard prior to tightening clamp nuts to recommended torque.

If dashboard thickness exceeds clamp grip range, clamp legs may be shortened.

Maximum recommended tightening torque for all hardware: 8 lb-in (0.90 N-m).

Caution, over tightening mounting hardware may damage the instrument.

MAINTENANCE

Periodically check and torque all hardware per mounting specifications.

Clean electrical connections if corrosion develops around hardware.

Clean glass with a soft, damp, clean cloth.

THANK YOU!

Thank you for purchasing a Beede instrument. Our instruments are made for you in the U.S.A. Visit our WEB site at www.beede.com or contact customer service for information on this or other Beede instruments.

LOCK WASHER


HEX NUT

MOUNTING "U" CLAMP

For electrical connections, use hex nuts and lock washers supplied with the mounting kit.

TO STARTER SOLENOID

VOLTAGE REGULATOR

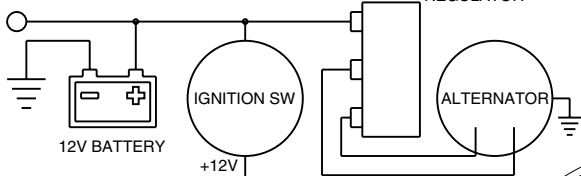

RANGING SWITCH (IF APPLICABLE SEE REVERSE SIDE FOR RANGING SWITCH SETTING INSTRUCTIONS)

WIRING CONNECTION, RANGING SWITCH SETTINGS AND PART NUMBER LABEL

DUAL SPEED OR 8K OUTPUT SIGNAL

ECM, MAGNETIC SENSOR, OR PULSE GENERATOR

TO LIGHT SWITCH OR +12V SOURCE

OPTIONAL LCD RESET SWITCH

SPST MOMENTARY ON

REAR VIEW OF INSTRUMENT