



Beede Electrical Instrument Company, Inc.
88 Village Street, Penacook, NH 03303-8910
Phone: (603) 753-6362 FAX: (603) 753-6201

Since 1917 Visit our WEB site <http://www.beede.com> ISO 9001 CERTIFIED

- AGRICULTURAL •
- AUTOMOTIVE •
- INDUSTRIAL •
- MARINE •
- TRUCK •
- BUS •

WARRANTY

Beede Electrical Instrument Co., Inc. warrants all instruments and accessories free from all defects in workmanship and materials on gauges that are less than three (3) years old or have been in service fewer than two (2) years and, at no charge, will replace or repair at Beede's option all instruments that fail. Contact Beede for complete details.

3" Paddle Wheel Speedometer W/Connector Installation Instructions

WARNING

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory.

Disconnect battery cables before installing the instrument.

Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

MOUNTING

Recommended dash hole size: 3.380±.015 in (85.85±0.38 mm) DIA.
Secure the instrument into dashboard with mounting "J" clamp and Kep nuts.
If dashboard thickness exceeds clamp grip range, clamp legs may be shortened.
Position instrument in dash board prior to tightening clamp nuts to recommended torque.
Maximum recommended tightening torque for all hardware: 6 lb-in (0.68 N-m).
Caution, over tightening mounting hardware may damage the instrument.

MAINTENANCE

Periodically check and torque all hardware per mounting specifications.
Clean glass with a soft, damp, clean cloth.


THANK YOU!

Thank you for purchasing a Beede instrument. Our instruments are made for you in the U.S.A. Visit our WEB site at www.beede.com or contact customer service for information on this or other Beede instruments.

Instrument Wiring Table	
Pin Number	Connection Name
1	Battery + (Required) Paddle Wheel Sender Blue Wire (Optional)
2	Ground (Required) Paddle Wheel Sender Bare Wire (Optional)
3	Paddle Wheel Sender Black Wire
4	Lamp (+12V)
5	No Connection
6	No Connection
7	Speed Calibration Potentiometer 1
8	Speed Calibration Potentiometer 2



Note:
Due to various available instrument options, not all connector pins may be present.

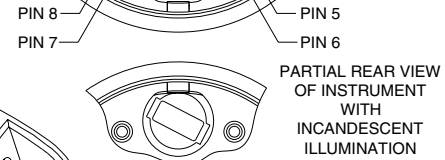


Calibration Potentiometer 1
Calibration Potentiometer 2
No Connect/Spare Terminal

1/4" Dia. Shaft

SPEED CALIBRATION POTENTIOMETER (Optional Equipment)
100K Ohm Multiturn
Beede P/N 537648 or equivalent

SENDER CABLE
Blue Wire: Battery +
Black Wire: Speedo Pin 3
Bare Wire: Ground

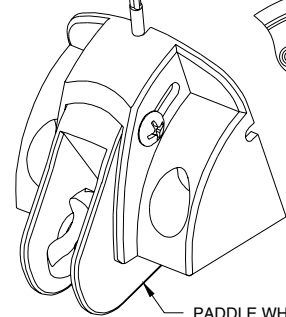

PADDLE WHEEL SENDER
Refer to installation and calibration instructions supplied with the paddle wheel sender.

